# XSeries<sup>G4</sup> products Combo digital module (2100543)

### Overview

The 2100543 TFIO module is a configurable 8-point digital I/O module. Each point can be configured to be either an input and/or output. All points are always inputs; however, if the output is activated the input will be held steady state. The module also maintains a 16-bit accumulator for each input; thus allowing any point to be used as a pulse accumulator.



# XSeries<sup>G4</sup> products Combo digital module (2100543)

## Point specifications

### Electrical for each point

- Open circuit voltage
- Short circuit leakage current
- 5VDC (Internally pulled up to 5VDC)
- -430uA typical
- Input capacitance
- Maximum allowable voltage range on input
- 1000pF typical
- -0.5VDC to 26.5VDC

### **Digital input**

- Dry Contact or voltage type
- Minimum contact resistance to activate input 15 KΩ
- Maximum voltage to activate the input: 2.0V, referenced to GND terminal
- Minimum voltage to deactivate the input: 3.0V, referenced to GND terminal

### **Digital output**

- Open Drain FET
- RDS(ON): 0.060Ω Typical.
- Maximum continuous sink current: 2A @ 24VDC

### **Pulse input**

- Maximum input frequency: 2850Hz @ 50% duty cycle
- Minimum high or low period: 175uS

 
TFIO digital input/digital output module pin designation				
	J1	J2	J3	J4
1	POINT 1 SIG	POINT 3 SIG	POINT 5 SIG	POINT 7 SIG
2	POINT 1 GND	POINT 3 GND	POINT 5 GND	POINT 7 GND
3	POINT 2 SIG	POINT 4 SIG	POINT 6 SIG	POINT 8 SIG
4	POINT 2 GND	POINT 4 GND	POINT 6 GND	POINT 8 GND


### Wiring requirements

When digital outputs are used to sink current, the sum total sink current for all points and modules should not exceed 5A total. If more than 5A are required, separate ground wires from module output ground to power source ground terminal (bus bar) are required. Failure to do so may cause erratic system operation. Sufficient gauge wire should be used to handle total load current.

Use shielded pair or twisted pair conductors to reduce the possibility of erroneous transitions on the inputs in high EMI/ RFI environments. (Ground the shield at field device).


### Typical point schematic



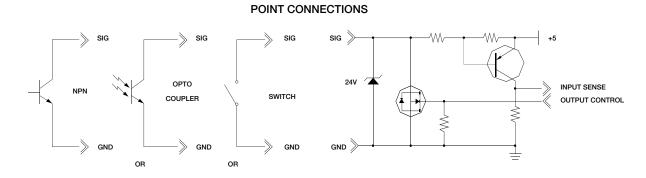


# Example connections



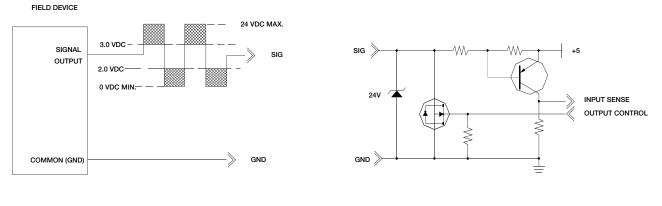

#### TYPICAL OUTPUT FIELD WIRING

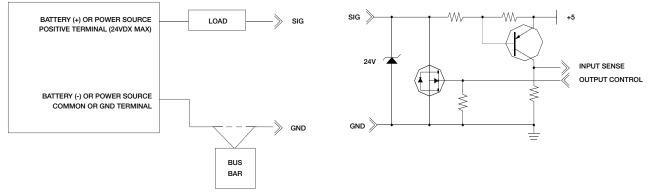

For further information on this and other TFIO modules refer to the User Manual.

# Contact us

### ABB Inc. Upstream Oil & Gas Process Automation

Toll-free: + 1 800 442 3097 Quotes: totalflow.inquiry@us.abb.com Orders: totalflow.order@us.abb.com Training: totalflow.training@us.abb.com Support: totalflowsupport@us.abb.com

### Upstream Oil & Gas Main Office 7051 Industrial Boulevard

Bartlesville, OK 74006 Ph: +1 918 338 4888

### Upstream Oil & Gas

California Office 4300 Stine Road, Suite 405-407 Bakersfield, CA 93313 Ph: +1 661 833 2030

#### Upstream Oil & Gas Kansas Office

2705 Centennial Boulevard Liberal, KS 67901 Ph: +1 620 626 4350

### Upstream Oil & Gas Texas Offices

3700 West Sam Houston Parkway South, Suite 600 Houston, TX 77042 Ph: +1 713 587 8000

3900 South County Road 1290 Odessa, TX 79765 Ph: +1 432 563 5144

150 Eagle Ford Road Pleasanton, TX 78064 Ph: +1 830 569 8062

www.abb.com/upstream

#### Note

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

Copyright © 2016 ABB Inc. All rights reserved



Product webpage

